

TO OPERATE:

STEP 1

PUSH CHILD-RESISTANT
LATCH IN AND
THEN UP.



STEP 2
PUSH IGNITION
LEVER DOWN
TO LIGHT.



TO ADJUST FLAME: While lighted, move lever toward "+" for higher flame,
toward "-" for lower flame.

**FOR MAXIMUM SAFETY, KEEP CHILD-RESISTANT LATCH
DOWN WHEN NOT IN USE**

WARNING: READ CAREFULLY

Failure to follow instructions may result in burn injury. **EXTREMELY FLAMMABLE.** Do not use near fire or flame.


CAUTION: Do not puncture, incinerate or expose to temperature below sun or otherwise above 120°F. Do not attempt to refill.
KEEP OUT OF REACH OF CHILDREN. As with all lighters, hold away from face while lighting.

CAUTION: Be sure flame is extinguished after use.
KEEP OUT OF REACH OF CHILDREN

No lighter is "childproof." The child-resistant features of this lighter are no substitute for adult supervision.

GUARANTEE

Should your Sanyo® lighter prove defective under normal use, return it for
replacement. For an approved lighter mail bag write to: Sanyo-Tokai,
P.O. Box 5555, Fontana, CA 92534-5555. (909) 241-8552. Ext. 405.

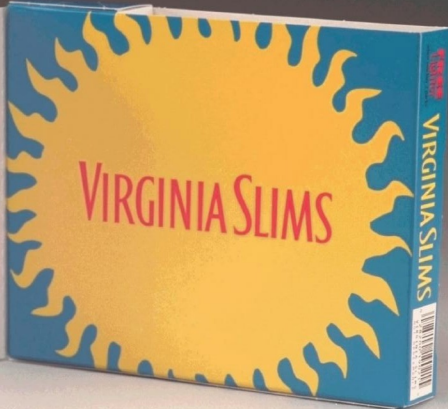

84830-C1

Source: <https://www.industrydocuments.ucsf.edu/docs/nlby0003>